

INSTALLATION GUIDE

(flush mount and semi recessed vessels)



Required Tools



ATTENTION


This product requires professional installation. Please provide your countertop fabricator with this information. Please observe all state and local building and plumbing codes.

CUSTOM INSTALLATION

Vessel sinks require custom installation based upon desired sink placement.


ACTUAL SINK SIZE AND SHAPE MAY VARY.

Universal Vessel Instructions

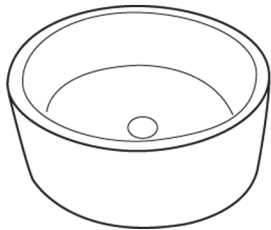

WARNING

Before installation, please inspect your product for any damage that may have occurred during shipping. If the product was damaged in the shipping process or your product needs to be returned for another reason, it must be in the original packaging. If the product is not returned with the original packaging you may not be eligible for a refund of the purchase price. Return fees may apply. Please contact your dealer for more information.

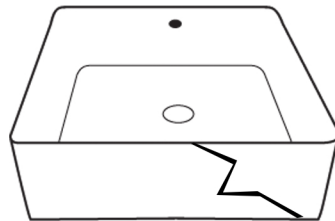

HOMEOWNERS

Please read before installation.

NEW INSTALLATION

When preparing for installation, it is recommended that you consult with your countertop fabricator as to your installation preference.

REPLACEMENT

If replacing a vessel sink with an undermount pre-existing hole, make sure that the base of the model you have chosen is larger than the existing hole. This will allow for any adjustments that might be needed for the installation process. Make sure that the base is large enough to secure safely to the existing countertop.

WHAT'S INCLUDED

Bathroom Vanity Vessel Bowl



WHAT'S NOT INCLUDED

Silicone Sealant/Adhesive

COUNTER AND SINK PREPARATION

Flushmount


1. Dry fit the sink in the desired location. Make sure to leave at least 5" at the rear of the vanity for a faucet. Trace the drain hole.
2. Remove sink and mark center point of drain using the new outline.
3. Create a 5" diameter hole cut-out using the same center point.
4. Use appropriate cutting tool for use with specified counter material.

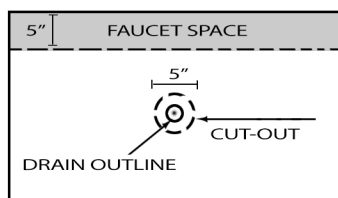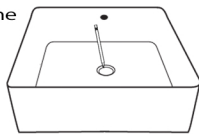

INSTALLATION

1. Flip the sink over.
2. Apply a continuous bead of silicone sealant / adhesive specifically designed for plumbing applications to the top side of the rim.
3. Flip the sink back over. Line up the drain hole and the cut-out. Press firmly on the sink to form a tight bond between the sink and countertop.
4. Install drain and faucet to manufacturers specifications.

* Instructional purposes only. Sink shape/size may vary from picture shown.

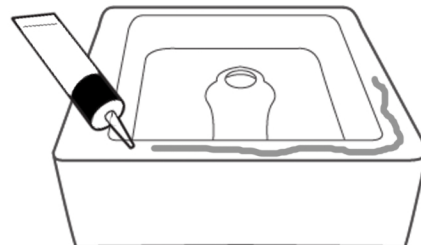

COUNTER AND SINK PREPARATION

Semi-Recessed

1. Trace the base of the sink to create the template of the cut out hole in which the sink will rest.
2. Align the template to in the desired location. Make sure to leave at least 5" at the rear of the vanity for a faucet, if faucet is not a wall mount faucet.
4. Use appropriate cutting tool for use with specified counter material to create cut out



INSTALLATION

1. Carefully place sink in the cut out for sink.
2. Apply a continuous bead of silicone sealant / adhesive specifically designed for plumbing applications to the top side of the rim.
3. Wipe away any excess sealant- be sure to fill any voids between sink and countertop opening. Press firmly on the sink to form a tight bond between the sink and countertop.
4. Allow to cure before installing drain and faucet to manufacturer specifications.

* Instructional purposes only. Sink shape/size may vary from picture shown.

